



Published on SOAR (<http://www.ctio.noirlab.edu/soar>)

[Home](#) > [Goodman High Throughput Spectrograph](#) > [Goodman High Throughput Spectrograph](#) > [Goodman HTS Manual](#) > Introduction to the Goodman HTS

---

# Introduction to the Goodman HTS

## Instrument Overview

The Goodman High Throughput Spectrograph has been upgraded to provide users with the *choice of one of two separate cameras*.

One is the original UV-optimized **Blue Camera**, with a 4096x4096 Fairchild CCD. The new device is the **Red Camera**, equipped with an e2v 4096x4096 detector optimized for work at red wavelengths with negligible fringing redward of ~650nm compared to the Blue Camera. For both detectors the pixel scale is the same (0.15 arcsec per pixel). This provides a 3096 x 3096 unbinned pixels (~7.2 arcmin diameter) FOV in imaging mode and a 4096 x 1896 unbinned pixels FOV in spectroscopic mode. The long slit masks in spectroscopic mode are approximately 3.9 arcmin in length and cover ~1560 unbinned pixels, leaving enough pixels above and below the slit to obtain an estimate of the stray and scattered light.

In both cameras, the CCD is read by the [Spectral Instruments](#) [1] controller. In the Blue Camera through 1 amplifier.

**Blue Camera:** Depending on binning and the gain setting, the CCD can be read in as little as 20 seconds (1x1 fast readout) to as long as 80 seconds (1x1 slow readout) in spectroscopic mode. Please see the table given in the [Goodman Overview](#) [2] page for a more detailed description.

The data are taken via a vncviewer on the Goodman data acquisition computer (soaric6 for the Red Camera and soaric2 for the Blue Camera) and examined via a vncviewer on the Goodman data analysis computer (soaric7). From soaric7, one can transfer the data to their home institution using "scp".

Unbinned Goodman spectra plus overscan and header information are approximately 16 Mbytes each. A typical night produces about 2-4 Gbytes of data and easily transferred over the internet. This is the preferred method of the SOAR partners. If this is unfeasible, please contact Sean Points prior to your run so that other options can be discussed.

The Goodman imaging (first) filter wheel contains space for 4 square 4x4 inch filters, plus one blank position. The second filter wheel holds 4 inch diameter circular filters, and has 6 positions, 5 regularly

equipped with the order sorting spectroscopic filters, and one open position. Filters may be up to 10mm thick.

For the list of available filters look at the [SOAR Filters page](#). [3] Special arrangements for installing filters should be consulted well in advance of an observing run with the Instrument Scientist.

## Philosophy and Structure of this Manual

This manual is intended for an observer planning to use the Goodman spectrograph. It is not intended to serve as a hardware or software reference document describing the inner workings of Goodman, although some details at that level may appear to help the observer plan observing strategies. Also, we assume that the observer is already familiar with CCD cameras, spectroscopic observations, and data reductions.

The [Goodman Overview](#) [2] is at the front of this manual. If you've read this far, and don't plan to read any further, be sure you understand the [Goodman Overview](#) [2] pages.

Development of the Goodman High Throughput Spectrograph is a continuing process. Throughout the lifetime of the instrument, filters will be added, old ones replaced, and software enhanced. This manual represents the status as of the date on the cover page. We expect to revise the manual occasionally to include information gained during engineering runs, as well as to reflect new filters.

## Supplemental Information

[A Beginner's Guide to Using IRAF](#) [4] (*IRAF* Version 2.10), Jeannette Barnes, August 1993

[A User's Guide to CCD Reductions with IRAF](#) [5], Philip Massey, February 1997

[A User's Guide to Reducing Slit Spectra with IRAF](#) [6], Phil Massey, Frank Valdes, Jeannette Barnes, April 1992

[Guide to the Slit Spectra Reduction Task DOSLIT](#) [7], Francisco Valdes, February 1993

# Goodman Spectrograph Overview

## Goodman Overview

Rev. Apr 2017

**At least read this!**

## Optics:

The Goodman optics are designed to transmit down to the atmospheric cutoff at 320 nm, and include lenses made of CaF<sub>2</sub> and of NaCl. The latter are the center elements of fluid-coupled triplets. None of the multiplets are over 4" in diameter which reduced the difficulty compared to spectrographs with larger pupil sizes. Each of the multiplets is sealed on one end with a face-mounted o-ring that imposes a known axial load, and on the other end with a rim-mounted o-ring that imposes a radial load, and finally held captive axially with a retaining ring that incorporates a third o-ring. This last o-ring does not participate in

the sealing of fluid, but avoids a metal glass interface that would be undesirable for the CaF<sub>2</sub> lenses. The salt lenses are held by the other optics and are never in contact with a seal.


## Filters:

There are two independent filter wheels: One holds 4 x 4 inch square filters, and can be fit with 4 filters. The second wheel holds 4 inch diameter filters, and normally holds the 5 order-sorting filters.

- The imaging filters include SDSS u, g, r, i and z, and Bessell U, B, V, R I sets. **Only 4 filters of the 4x4 inch imaging filters can be installed at a time.**
- The spectroscopic order sorting filters includes GG-385, GG-455, GG-495, and OG-570 filters. These are always mounted (However, we expect observers to request them specifically in their Instrument Setup forms.)

The full list of available filters can be accessed in the [SOAR filter list page](#).<sup>[3]</sup>

The filters are in the collimated beam (tilted to avoid ghosts). Installing different filters is straight forward, but is a day-time operation. Special arrangements for filter installations should be consulted with the Instrument Scientist well in advance of the observing run.

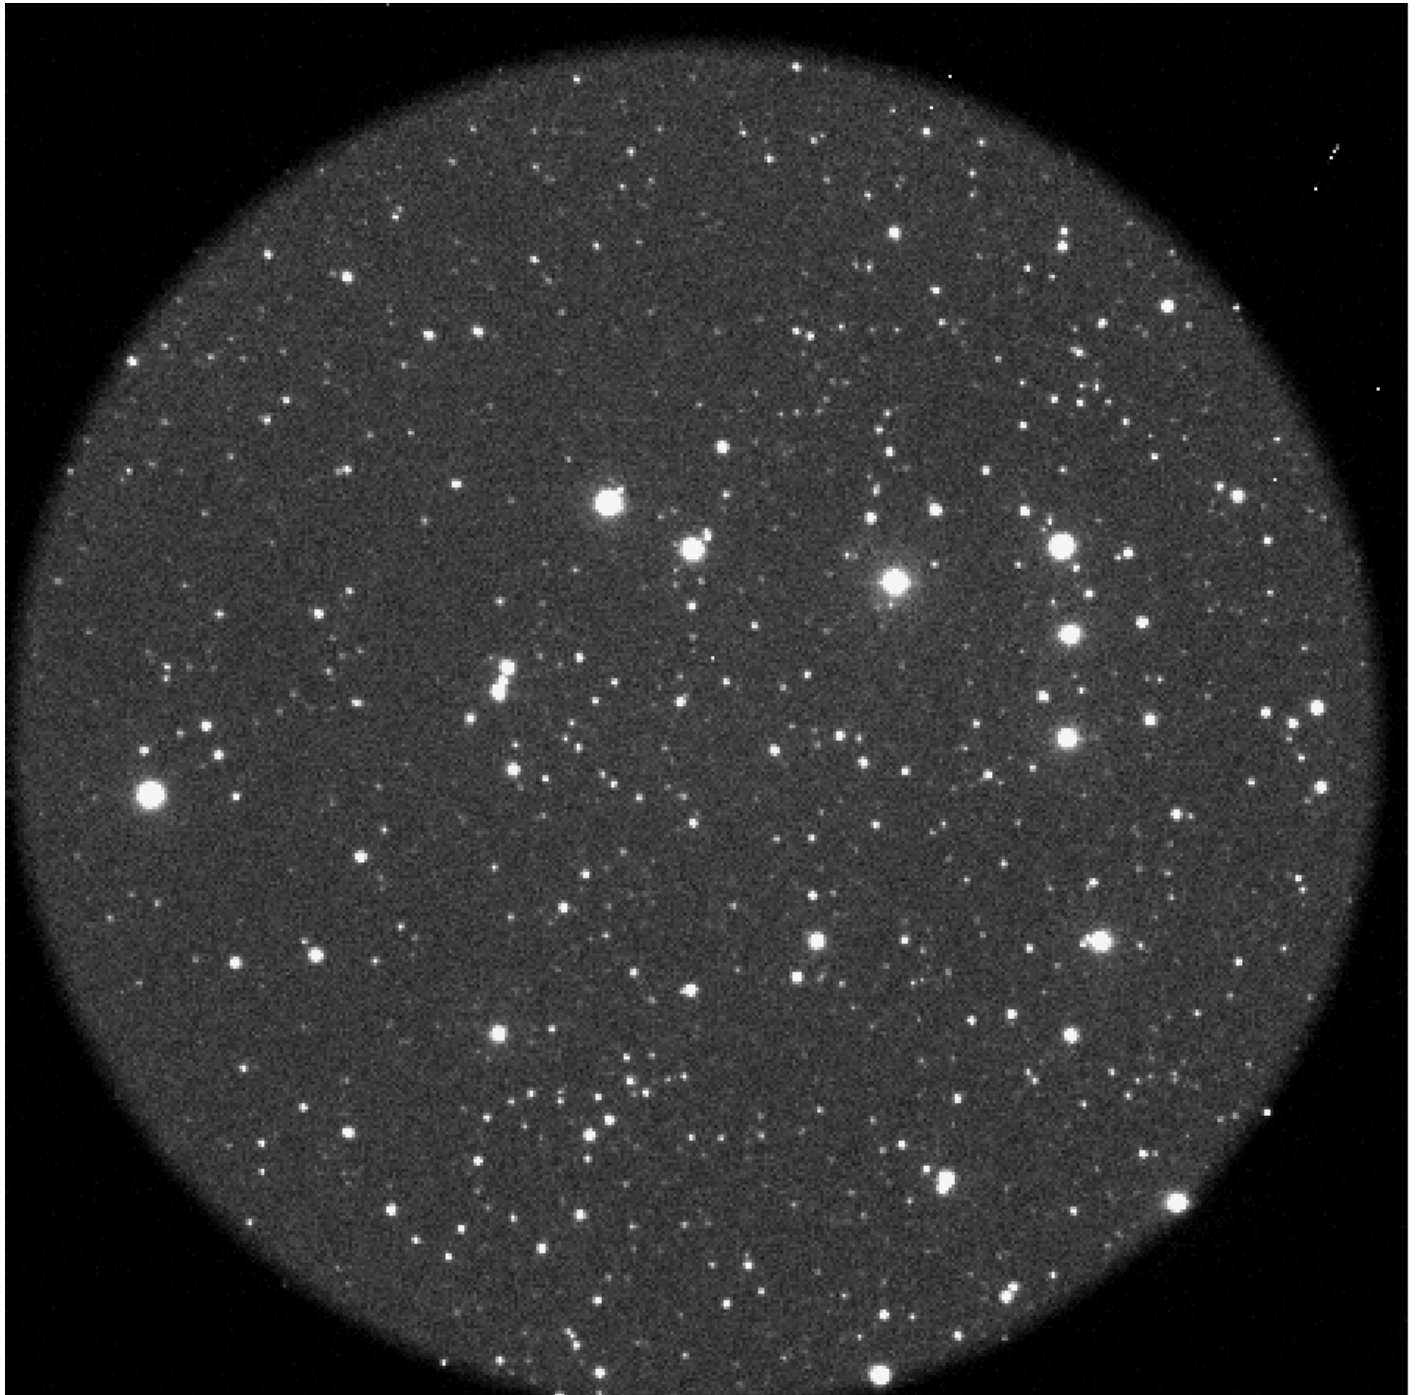

## Imaging Mode

In imaging mode the **plate scale is 0.15 arcsec/pixel and the field of view is 7.2 arcmin in diameter (3096 x 3096 unbinned pixels)**. Filters available include Bessell UBVRI, SDSS ugriz, and VR. See the [SOAR filter list](#)<sub>[3]</sub> for other filters

## Spectroscopic Mode

In Spectroscopic mode the Goodman Spectrograph can obtain both single, longslit spectra *and* spectra of multiple objects simultaneously over a field of 3.0 x 5.0 arcminutes using multi-slit masks. A carousel style mask changer, holding up to 36 masks allows the slit plates to be interchanged and located at the instrument entrance aperture.

### **Single Slit masks:**

[The instrument is currently available with the following compliment of fixed long slits:](#) <sup>[8]</sup> **0.45, 0.60, 0.80, 0.95, 1.0, 1.2, 1.5, 1.9, 3.2, 4.0, and 10.2 arcsec wide.** <sup>[8]</sup> **Each slit is 3.9 arcminutes long.**

Note: [the Goodman Acquisition Camera \(GACAM\)](#) <sup>[9]</sup> has a FOV=1.8 arcmin in its longest dimension, therefore, it does not span the full length of a Goodman long slit. If your science requires a full view of the long slit you will need to use the pre-imaging procedure for object acquisition ([see the Step-by-step guide to Observing with Goodman](#) <sup>[10]</sup>).

### **Multi-Slit Object (MOS) masks:**

**Each Goodman MOS mask spans a field of view of 3x5 arcmin on the sky.**

Within this field the user can arrange multiple slits of various width and lengths. The process of creating mask files for approved programs is the responsibility of each program PI. A [Slit Designer software](#) <sup>[11]</sup> that runs on Windows 7 (a port for Mac OSX in in the works) has been developed by the Goodman Lab group at UNC. Masks are required to be sent to the following e-mail address:

[goodman\\_mos@ctio.noao.edu](mailto:goodman_mos@ctio.noao.edu) <sup>[12]</sup> at least **1 month before the observations** are scheduled. In your mask submission you need to attach the following files: FITS image of each field -with WCS-, and the .g, .msk, .txt files generated by the Slit Designer software. Currently, the PI also can access remotely a SOAR Windows 7 machine with a working [Slit Designer software](#) <sup>[11]</sup>. For details, contact SOAR Goodman Support Scientists.

### **Gratings and Preset Observing Modes:**

**Up to three (3) gratings can be installed in the spectrograph at a time**, in a linear stage which allows the rapid interchange of gratings. Installing different gratings is a day time operation. **No grating changes are done during the night.**

**Goodman has now different Blue and Red-optimized options for the 1200 l/mm grating.**

**Please check the updated list of currently available gratings in the [Goodman Spectrograph Gratings page.](#)** <sup>[13]</sup>

The table below shows the dispersion and the wavelength coverage for observations in our set spectroscopic modes. Please note that the 1800, 2100, and 2400 l/mm gratings are operated in Custom mode where the observer selects the central wavelength for their observations. Because of limits in the camera rotation stage, it is not possible to use the 2100 and 2400 l/mm gratings beyond certain wavelength limits.

| Grating<br>(lines/mm) | Dispersion<br>(Å/pixel) | Coverage<br>(Å)  | Max R @ 550nm<br>( 3pix with 0.46" slit) | Blocking<br>Filter                                       |
|-----------------------|-------------------------|--|--|--|
| 400                   | 1.00                    | M1: 300-705<br>M2: 500-905   | 1850                                     | —<br>GG-455  |
| 600                   | 0.65                    | UV: 301-569<br>Blue: 350-616<br>Mid: 435-702<br>Red: 630-893   | 2800                                     | —<br>—<br>GG-385<br>GG-495                               |
| 930                   | 0.42                    | M1: 300-470<br>M2: 385-555<br>M3: 470-640<br>M4: 555-725<br>M5: 640-810<br>M6: 725-895                               | 4450                                     | —<br>—<br>GG-385<br>GG-495<br>GG-495<br>OG-570           |
| 1200                  | 0.31                    | M0: 302-436<br>M1: 350-485<br>M2: 420-550<br>M3: 490-615<br>M4: 555-685<br>M5: 625-750<br>M6: 695-815<br>M7: 765-880 | 5880                                     | —<br>—<br>—<br>—<br>GG-455<br>GG-455<br>GG-495<br>OG-570 |
| 1800                  | 0.19                    | 800  | 9610                                     | As needed  |
| 2100                  | 0.15                    | 630  | 11930                                    | As needed  |
| 2400                  | 0.12                    | 510  | 14280                                    | As needed  |

The VPH gratings operate via Bragg scattering and their efficient operation requires Littrow or near-Littrow operation of the spectrograph. A grating rotation stage sets the incident angle to the desired value, which depends upon the line density of the grating and the central wavelength of interest. A concentric camera rotation stage must then be set to nearly twice this angle to intercept the diffracted beam. A set of fixed observing modes for each grating are given below, where applicable. ***All gratings can be used in the Custom mode.***

### Calibration Lamps:

We have a quartz lamp for spectral flats and HgAr, Ne, Ar, and CuHeAr lamps for wavelength calibration. Plots of these spectra with the lines identified in each of our standard spectroscopic modes can be found in the [Goodman Comparison lamp web page](#). [14]

With the 400, 600 and 930 line gratings we recommend also taking Dome Flats during your afternoon calibrations.

## Choice of Detectors

**If science program requires:**






# BLUE CAMERA

[15]

- Best throughput down to UV atmospheric cutoff
- It is an ongoing programs using Blue Camera
- Maximum flexibility to create small ROIs on-chip, e.g., for fast time-series photometry

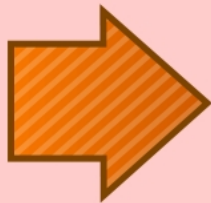

# RED CAMERA

[16]

**Most programs requiring wavelengths redward of  $\sim 4500$  Å will benefit from the enhanced red throughput and minimum fringing provided by the red camera.**

**Fringing Measured in the Goodman Blue and Red Cameras. Peak to peak.**

| Wavelength (Å) | Blue Camera Fringing (%) | Red Camera Fringing (%) |
|----------------|--------------------------|-------------------------|
| 7800           | 3                        | 0                       |
| 8500           | 10                       | 0.3                     |
| 9000           | 22                       | <1                      |

## **Use of blocking filters:**

Those taking spectra to the red of  $\sim 600\text{nm}$  should be aware that, depending on the spectrum of their target, there may be significant contamination from second order blue light superposed on the first order

red spectrum (a blue leak). The blue leak will change the apparent shape of the red continuum, "fill in" absorption features in the red, and may "imprint" emission or absorption features occurring in the blue spectrum at roughly twice their wavelength. This second order contamination can be eliminated by use of an appropriate blocking filter. However, this does entail a loss of efficiency in the red since the "in-band" transmission of the available blocking filters is not 100%.

Those needing spectrophotometric calibration should note that essentially all spectrophotometric standards are quite blue, so there will be a significant blue leak if they are measured without a blocking filter, which will invalidate the calibration of science target spectra, even if the targets themselves have no blue flux. A possible approach would be to measure the science targets without a blocking filter, the standards with one, and then correct the standards for the blocking filter transmission. However, we currently do not have measurements of the blocking filter transmission which we consider sufficiently reliable for these purposes. In the meantime observers who plan to do this should measure their own by observing a red star with and without blocking filter.

In principle contamination by the blue leak will also effect arc lamp calibrations (superposing blue lines on the red spectrum at roughly twice their wavelength) and flat fields. However, with the exception of the HgAr lamp the blue lines in all the calibration sources are very weak compared to the red lines, and similarly the flat field sources are much brighter in the red than the blue.

## **Scattered (and Stray) Light:**


Measured to be small in imaging mode by comparing imaging FOV and surroundings with a bright star illuminating the pupil. Some scattered and stray light is seen in the Goodman spectroscopic mode. We currently see 0.06e/s of stray and/or scattered light in the spectroscopic mode with 1x1 pixel binning and the 100kHz ATTN2 readout. Efforts are underway to replace the tent that covers Goodman with a light-tight box. We are also looking for low-level emitting LEDs on all of the Goodman motors and covering them with metallic tape as we find them.

## **Calibration Issues:**

Obtaining good quartz spectra over the entire wavelength range with the 400 l/mm grating is difficult because of the different spectral response at the red and blue ends. The most noticeable effect is that to obtain sufficient counts in the blue end, the red end becomes saturated. A blocking filter is on order so that composite quartz flats can be made. This effect is not as great with the other gratings because the wavelength range isn't as large.

There also exists contamination of the flats by scattering from the back of the second filter wheel. Use of the blocking filter mentioned above mitigates this contamination. Finally, with the BLUE CAMERA fringing appears in the spectra to the red of the H $\alpha$  line. With the availability of the RED CAMERA, fringing at red wavelengths is greatly reduced, as can be seen in this plot below.



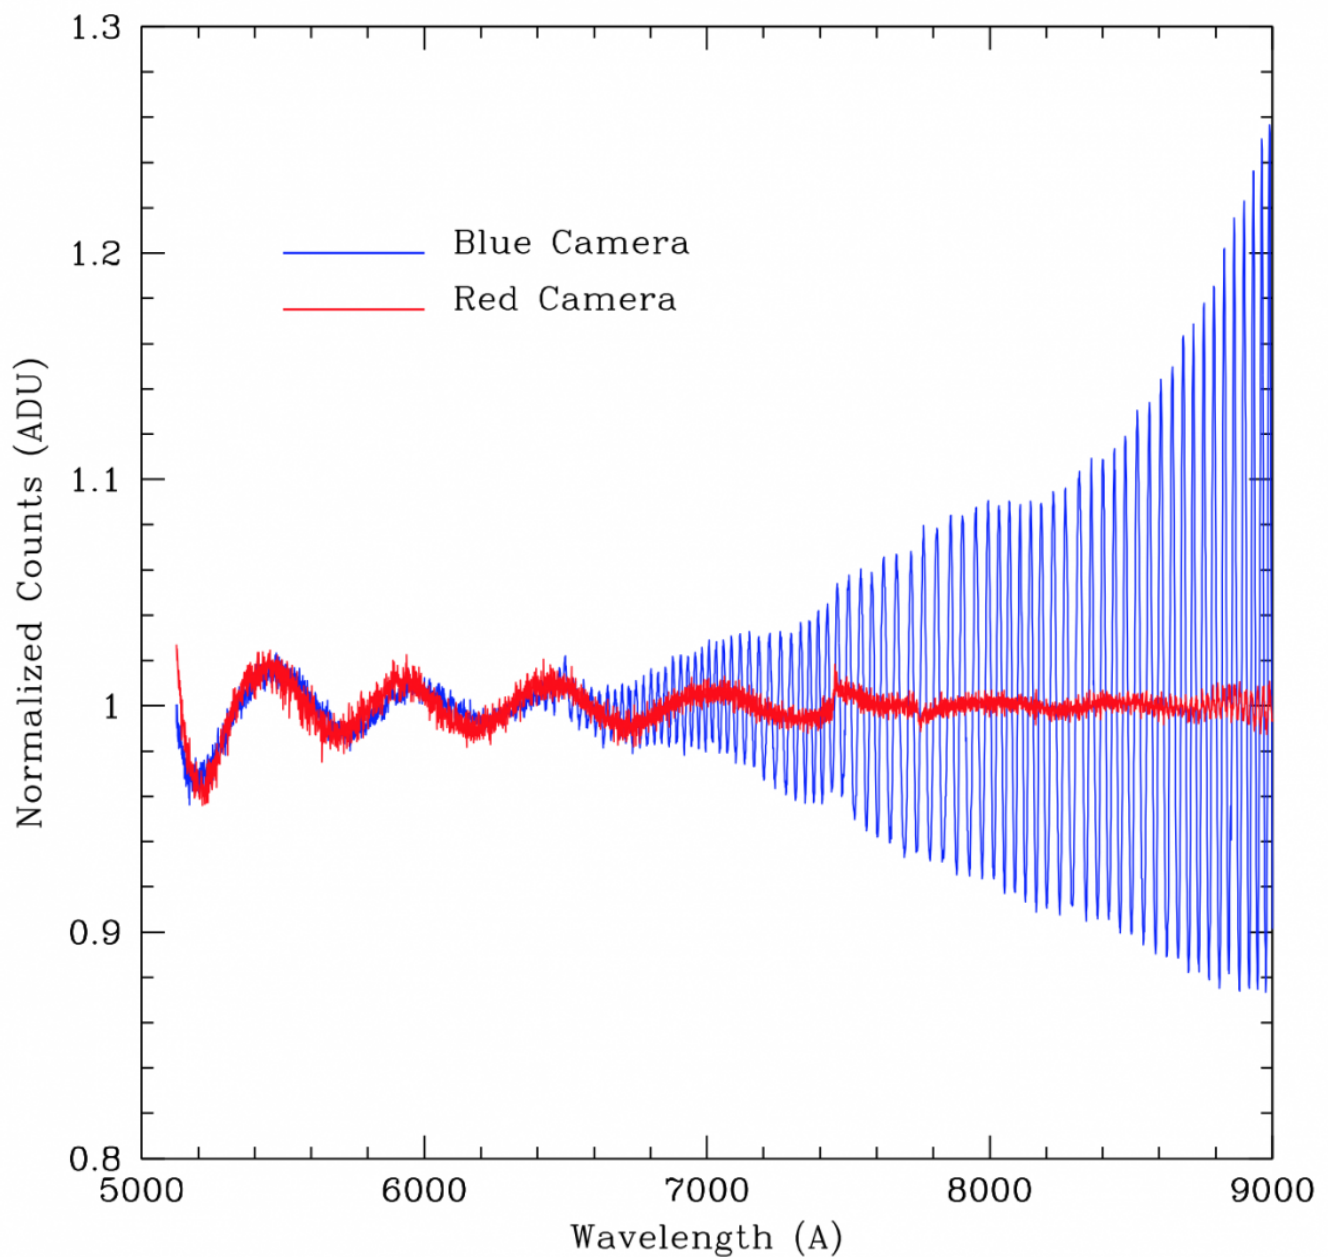

## Flexure:

The instrument has active flexure compensation based on the Nasmyth rotator angle. The corrections are successful at the fraction of a pixel level for the full range of rotator angles.

---

**Source URL:** <http://www.ctio.noirlab.edu/soar/content/introduction-goodman-hts>

### Links

- [1] <http://www.specinst.com/>
- [2] <http://www.ctio.noirlab.edu/soar/content/goodman-spectrograph-overview>
- [3] <http://www.ctio.noirlab.edu/soar/content/filters-available-soar>
- [4] [http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/IRAF\\_beginners\\_guide.pdf](http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/IRAF_beginners_guide.pdf)
- [5] <http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/irafguid-1.pdf>

- [6] [http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/IRAF\\_LSreduce.pdf](http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/IRAF_LSreduce.pdf)
- [7] <http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/doslit.pdf>
- [8] <http://www.ctio.noirlab.edu/soar/content/goodman-long-slits>
- [9] <http://www.ctio.noirlab.edu/soar/content/goodman-acquisition-camera-gacam>
- [10] [http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/Goodman\\_Tutorial\\_2017.pdf](http://www.ctio.noirlab.edu/soar/sites/default/files/GOODMAN/Goodman_Tutorial_2017.pdf)
- [11] [http://www.ctio.noirlab.edu/soar/sites/default/files/images/Instruments/Slitmask\\_Guide.pdf](http://www.ctio.noirlab.edu/soar/sites/default/files/images/Instruments/Slitmask_Guide.pdf)
- [12] [mailto:goodman\\_mos@ctio.noao.edu](mailto:goodman_mos@ctio.noao.edu)
- [13] <http://www.ctio.noirlab.edu/soar/content/goodman-spectrograph-gratings>
- [14] <http://www.ctio.noirlab.edu/soar/content/goodman-comparison-lamps-updated>
- [15] <http://www.ctio.noirlab.edu/soar/content/goodman-blue-camera>
- [16] <http://www.ctio.noirlab.edu/soar/content/goodman-red-camera>